



Stinger S32P Tactical Airsoft Rifle 6mm Plastic BBs

OWNER'S MANUAL

READ ALL INSTRUCTIONS AND WARNINGS IN THIS
MANUAL BEFORE USING THIS AIRSOFT GUN

Distributed by:
Crosman Corporation
7629 Routes 5 & 20,
Bloomfield, NY 14469
www.crosman.com
1-800-724-7486
Made in the U.S. with some foreign components.

S32B515

WARNING: Not a toy. Misuse or careless use may cause serious injury, particularly to the eye. Eye protection must be worn by the user and any person in range. May be dangerous up to 100 yds (91.44m). Read owner's manual before using.

WARNING: Do not brandish or display this airsoft gun in public – it may confuse people and may be a crime. Police and others may think it is a firearm. Do not change the coloration and markings to make it look more like a firearm. That is dangerous and may be a crime.

WARNING: This product contains a chemical known to the state of California to cause cancer and birth defects (and other reproductive harm).

YOU AND OTHERS WITH YOU SHOULD ALWAYS WEAR EYE PROTECTION TO PROTECT YOUR EYES.

READ ALL INSTRUCTIONS AND WARNINGS IN THIS MANUAL BEFORE USING THIS AIRSOFT GUN.

BUYER AND USER HAVE THE DUTY TO OBEY ALL LAWS ABOUT THE USE
AND OWNERSHIP OF THIS AIRSOFT GUN.

 
Recommend 18 years or older to purchase. Intended for use by those 16 or older.

Please read this owner's manual completely. Remember to treat this airsoft gun with the same respect you would a firearm. Always carefully follow the safety instructions found in this owner's manual and keep this manual in a safe place for future use.

If you have any questions regarding your new airsoft gun, please contact Crosman Customer Service at: 1-800-724-7486, 585-657-6161 or www.crosman.com.

1. Learning the Parts of Your New Airsoft Rifle

Learning the names of the parts of your new airsoft rifle will help you to understand your owner's manual. Use this manual to increase your enjoyment of this airsoft rifle.

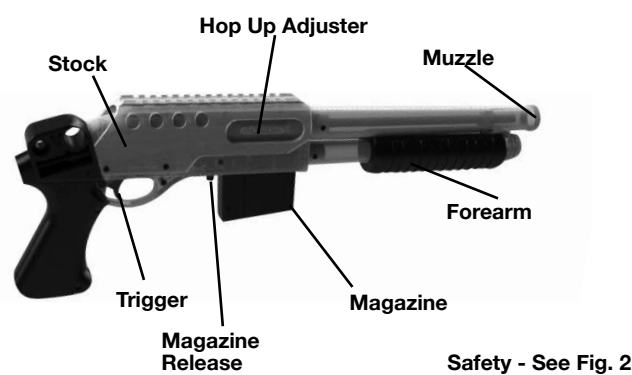

2. Operating the Safety

WARNING: Keep the airsoft gun in the "ON SAFE" position until you are ready to shoot. Then turn the safety to the "OFF SAFE" position.

 
2.1 To Put the airsoft gun "ON SAFE:"

- Locate the safety directly behind the trigger.
- Push the safety from the left side all the way in (Fig. 2). The safety is not "ON SAFE" unless it is pushed all the way in and the RED ring around the left side of the safety is NOT showing.

Like all mechanical devices, a airsoft gun safety can fail. Even when the safety is "ON SAFE", you should continue to handle the airsoft gun safely. NEVER point the airsoft gun at any person. NEVER point the airsoft gun at anything you do not intend to shoot.

2.2. To Take the airsoft gun "OFF SAFE:"

- Push the safety from the right side all the way in. When you can see the RED ring around the left side of the safety, the airgun is "OFF SAFE" and can be fired.

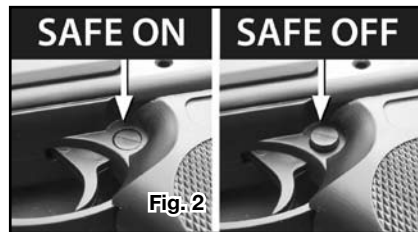

3. Loading and Unloading Plastic BBs

WARNING: Use 6 mm airsoft BBs only in this airsoft gun. Use of any other ammunition can cause injury to you or damage to the airsoft gun. NEVER RE-USE AMMUNITION.

3.1 Loading Plastic BBs

- Make sure the airsoft rifle is "ON SAFE" and pointed in a SAFE DIRECTION.
- Release the BB magazine by pushing in on the magazine release button behind the magazine (Fig. 3).
- Open the BB loading door of the magazine and pour in 6mm airsoft BBs (Fig. 4A) (see specifications chart for capacity)
- Close the BB loading door.
- Turn the magazine as shown in figure 4B and pull back the BB follower tab.
- Gently shake the magazine, allowing BBs to load in the chamber.
- Place a finger over the end of the magazine where the BBs will exit.
- With the magazine pointed in a safe direction, release the BB Follower tab.

NOTE: Releasing the BB follower tab quickly, or without the end covered, could allow BBs to exit the magazine.

- Insert the loaded clip into the airsoft gun.
- Your airsoft gun is now loaded and ready to fire, after reading the entire manual.



Fig. 3 Magazine Release

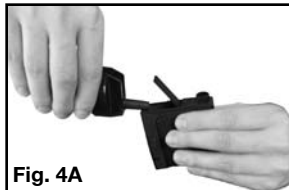 


Fig. 4A

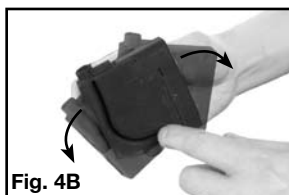 


Fig. 4B

3.2 Unloading Plastic BBs

- Make sure the airsoft rifle is "ON SAFE" and pointed in a SAFE DIRECTION.
- Release the BB magazine by pushing in on the magazine release button behind the magazine (Fig. 3).
- Do not put the magazine back in the gun.
- Follow section 4 on pumping the airsoft gun.
- After reading section 5 on aiming and firing safely, take the gun "OFF SAFE" and pull the trigger.
- Repeat these steps until you are no longer firing plastic BBs.
- Put the airsoft gun back "ON SAFE".
- Open the BB loading door of the magazine and pour out any remaining – 6mm airsoft BBs in.
- Close the BB loading door.

WARNING: Never assume that because the airsoft gun no longer fires a plastic BB and/or the magazine is removed, that a plastic BB is not lodged in the barrel. Always treat the airsoft gun as though it is loaded and with the same respect you would a firearm.

4. Pumping Your Airsoft Rifle

- Put the airsoft gun "ON SAFE" (See Step 2A).

WARNING: Always hold the forearm firmly when you pump it to prevent possible injury.

WARNING: Never pump your airsoft gun more than once. Over-pumping can cause major damage to your airsoft gun.

- Holding the forearm firmly, pull it all the way back. Do not twist the forearm while pumping. Use a straight stroke to prevent breakage (Fig. 5).

- Return the forearm to the original closed position with a smooth stroke. Be sure to hold the forearm firmly as you close it.

NOTE: You must follow the procedure for pumping and firing your airsoft gun each time you shoot.



Fig. 5

5. Adjusting the Hop Up

Your airsoft gun is manufactured with a hop-up system. The purpose of this system is to change the spin on the BB as it leaves the muzzle allowing you to adapt your shot for different distances.

- Make sure the airsoft gun is "ON SAFE" (see section 2A) and the magazine is removed.
- Point the airsoft gun in a SAFE DIRECTION.
- Locate the hop up adjustment slide on the side of the gun (fig. 6) Push the slide back for less spin or forward for more spin.

6. Adjusting the Stock- (select models only)

- The gun is designed with a stock that is adjustable to six different positions.

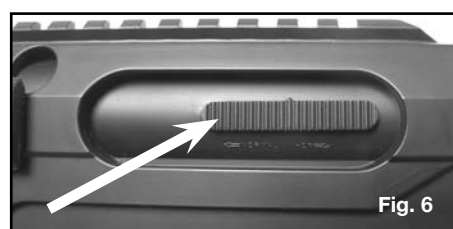 


Fig. 6

- Make sure the airsoft gun is "ON SAFE" and pointed in a SAFE DIRECTION.
- Push up and release the stock adjustment lever.
- Pull the stock out until it clicks into place.
- Repeat pulling the stock out, or pushing the stock back in until the stock is in the desired position.

7. Aiming and Firing Safely

7.1 Aiming Safely

- You and others with you should always wear shooting glasses to protect your eyes.
- Always aim your airsoft rifle in a SAFE DIRECTION. When you are sure of your target and backstop, and the area around the target is clear, pump the airsoft rifle (See Step 4), take "OFF SAFE" (See Step 2.2) and squeeze the trigger to fire.
- Do not shoot at hard surfaces or at the surface of water. The plastic BBs may bounce off or ricochet and hit someone or something you had not intended to hit. If the plastic BBs should happen to hit a hard surface, DO NOT reuse those plastic BBs because they could cause possible damage to your airsoft rifle.
- Always choose your target carefully. It is best to shoot at targets, which are attached to a safe backstop. Your backstop should be checked for wear before and after each use. Replace your backstop if the surface is worn or damaged, or if a ricochet occurs.
- Your airsoft rifle is designed for target shooting and is suited for both indoor and outdoor use. Always remember to place your target carefully. THINK about what you will hit if you miss the target, or if the plastic BB ricochets.

7.2 Firing Safely

- Make sure the airsoft rifle is "ON SAFE" (See Step 2.1).
- Point the airsoft rifle in a SAFE DIRECTION.
- Follow section 4 on pumping the airsoft gun.
- After reading section 9 on aiming and firing safely, take the airsoft gun "OFF SAFE" and pull the trigger.
- Repeat these steps until you are no longer firing plastic BBs.
- Put the airsoft gun back "ON SAFE".
- Remove the magazine.

8. Maintaining Your Airsoft Rifle

- Tampering with the airsoft rifle or attempts to change the airsoft rifle in any way may make it unsafe to use, cause injury particularly to the eye, and will void the warranty.
- If you drop your airsoft rifle, check to see that it works properly before you use it again. If anything seems changed, like a shorter or weaker trigger pull, this may mean worn out or broken parts. Call Customer Service at Crosman for assistance before using your airsoft rifle again.

9. Reviewing Safety

- Do not ever point the airsoft rifle at any person. Do not ever point the airsoft rifle at anything you do not intend to shoot.
- Always treat the airsoft rifle as though it is loaded and with the same respect you would a firearm.
- Always aim in a SAFE DIRECTION. Always keep the muzzle of the airsoft rifle pointed in a SAFE DIRECTION.
- Always keep the airsoft rifle "ON SAFE" until you are ready to shoot in a SAFE DIRECTION.
- Always check to see if the airsoft rifle is "ON SAFE" and unloaded when getting it from another person or from storage.
- Always keep your finger off the trigger and out of the trigger guard until ready to shoot.
- If your reading or prescription glasses are not safety glasses make sure you wear shooting glasses over your regular glasses.
- Use 6 mm plastic BBs only.
- Do not shoot at hard surfaces or at the surface of water. The plastic BBs may bounce off or ricochet and hit someone or something you had not intended to hit. If the plastic BBs should happen to hit a hard surface, DO NOT reuse those plastic BBs because they could cause possible damage to your airsoft rifle.
- Replace the backstop if it becomes worn. Place the backstop in a location that will be safe should the backstop fail.
- Do not attempt to disassemble or tamper with your airsoft rifle. Call Customer Service at Crosman Corporation for repair.
- Do not put the airsoft rifle away loaded. Make sure ALL of the plastic BBs are unloaded from the airsoft rifle (See Step 3.2).
- Always store this airsoft rifle in a secure location.

SPECIFICATIONS

Mechanism/Action	Single shot spring pump	Overall length	Up to 20.5 in. (52.07 cm)
Caliber/Ammunition	6mm plastic BBs	Safety	Cross bolt
Magazine Capacity	Standard model Up to 13 plastic BBs	Velocity	Up to 350 fps (106.7 m/s)
	Adjustable model Up to 24 plastic BBs	Weight	2.98 lbs. (1.35 kg)
Reservoir	Standard model Up to 175 6mm BBs	Barrel Material	Smooth bore aluminum
	Adjustable model Up to 491 plastic BBs		

PERFORMANCE: Many factors can affect velocity, including brand of projectile, type of projectile and barrel condition.

DO NOT RETURN THIS PRODUCT TO THE STORE.

Our customer service representatives will help. You can get answers to frequently asked questions at www.crosman.com or you can contact us directly at 1-800-7AIRGUN (1-800-724-7486)

CUSTOMER SERVICE

If your airsoft gun is not functioning, we recommend that you call Crosman Corporation Customer service at 1-800-724-7486 or 585-657-6161. (International customers should contact their distributor.) DO NOT ATTEMPT TO DISASSEMBLE IT! If you take it apart you probably will not be able to reassemble it. Crosman assumes no warranty responsibility under such circumstances.

LIMITED 30 DAY WARRANTY

This product is warranted to the retail consumer for 30 days from date of retail purchase against defects in material and workmanship and is transferable.

WHAT IS COVERED

Replacement parts and labor. Transportation charges to consumer for repaired product.

WHAT IS NOT COVERED

Transportation charges to Crosman for product. Damages caused by abuse, modification or failure to perform normal maintenance. Any other expense. CONSEQUENTIAL DAMAGES, INCIDENTAL DAMAGES, OR INCIDENTAL EXPENSES, INCLUDING DAMAGE TO PROPERTY. SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATION OR EXCLUSION MAY NOT APPLY TO YOU.

WARRANTY CLAIMS

USA Customers: Attach your name, address, description of problem, phone number and copy of sales receipt to product. Package and return to Crosman Corporation, Routes 5 & 20, Bloomfield, NY 14469 USA.

Canadian Customers: Contact the Gravel Agency 418-682-3000 X46

International Customers: Return product to your nearest distributor. If you do not know your distributor call 585-657-6161 and ask for our International Department for assistance.

IMPLIED WARRANTIES

ANY IMPLIED WARRANTIES, INCLUDING THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO 30 DAYS FROM DATE OF RETAIL PURCHASE. SOME STATES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THE ABOVE LIMITATIONS MAY NOT APPLY TO YOU.

To the extent any provision of this warranty is prohibited by federal, state, or municipal law which cannot be pre-empted, it shall not be applicable. This warranty gives you specific legal rights, and you may have other rights which vary from state to state.

CROSMAN is a registered trademark of Crosman Corporation in the United States.

